




# LX7IWLCD INSTALLATION INSTRUCTIONS



## Inside of Door Speaker

Video and Audio terminals

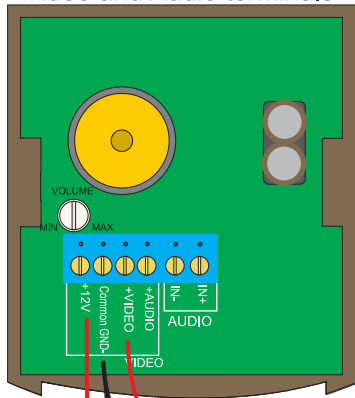

NOTE: Please see programming for video duration on monitor when door station is pressed.

C304CR: 1-98 Seconds

C404CR/C403HIFI: 1-60 Seconds or 1-20 Minutes

