


Gate Station Disassembly Instructions

Side Profile

Locked Position

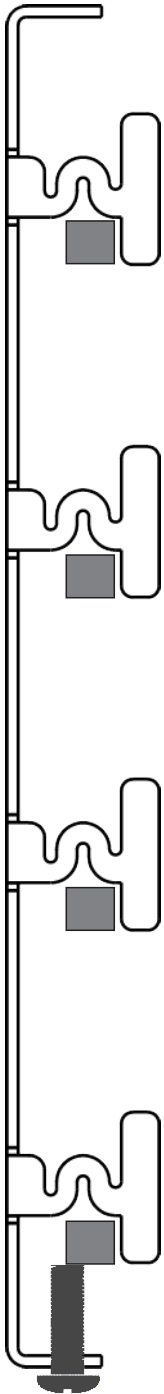

A


- 1) Loosen screws half an inch travel
- 2) Push the head of the screw to lift the locking mechanism from the backbox guide lock. Refer to Figure A and Figure B.

3) Separate.

** Do not remove the screws completely

Side Profile

Unlocked Position

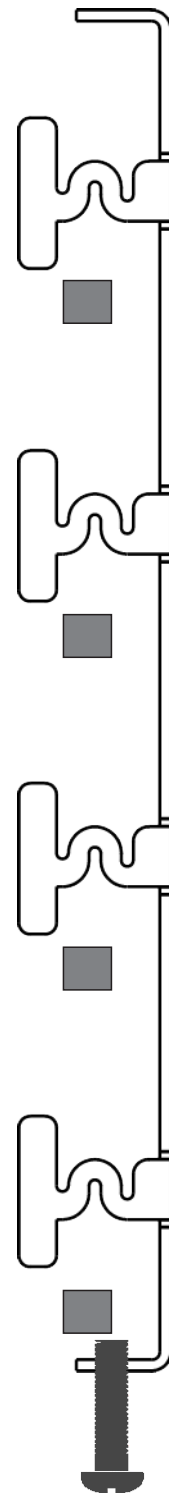

B